


SEE II AIR FOIL INTERFERENCE

When installing First Light's Illuminated School Bus Sign (ISBS) on a school bus in conjunction with a See II Air Foil product, it is acceptable to shorten and drill a new hole in the flat surface of the twist brackets (item 64). The twist brackets can be modified, however must not be eliminated as they are essential to securing the air foil to the school bus. The twist brackets must be bolted to the steel rear cap of the bus as shown below and stated in the See II installation instructions (linked below).

Please contact See II Corporation with any further questions or comments.

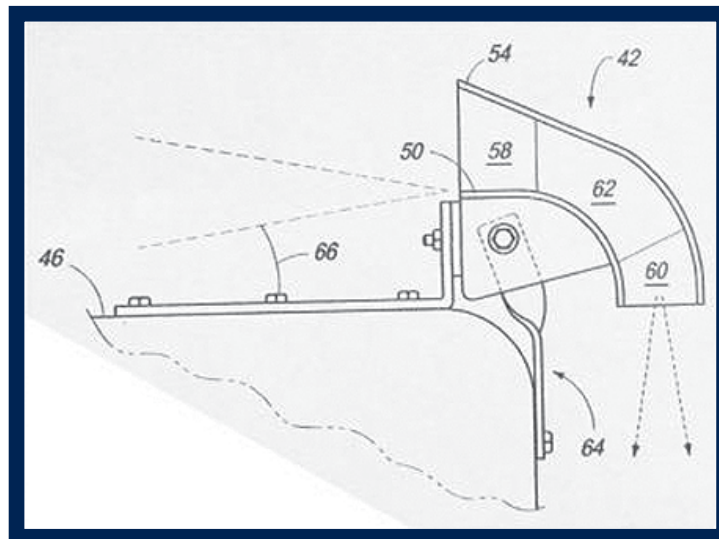

<https://seeiiairfoils.com/>